
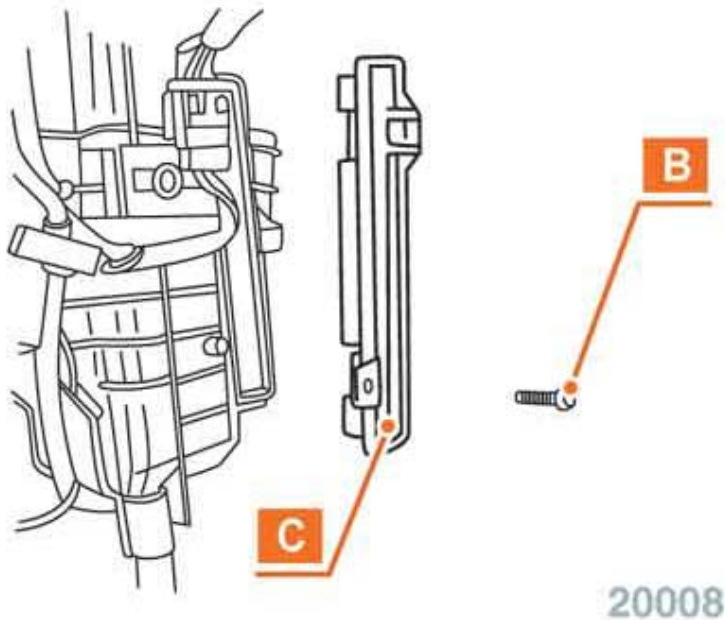


Periodicity (km) : 20000


Time scale: 0.20 Hours.hundredths

Fiat Panda II (169) since 2003

ACCESSIBILITY

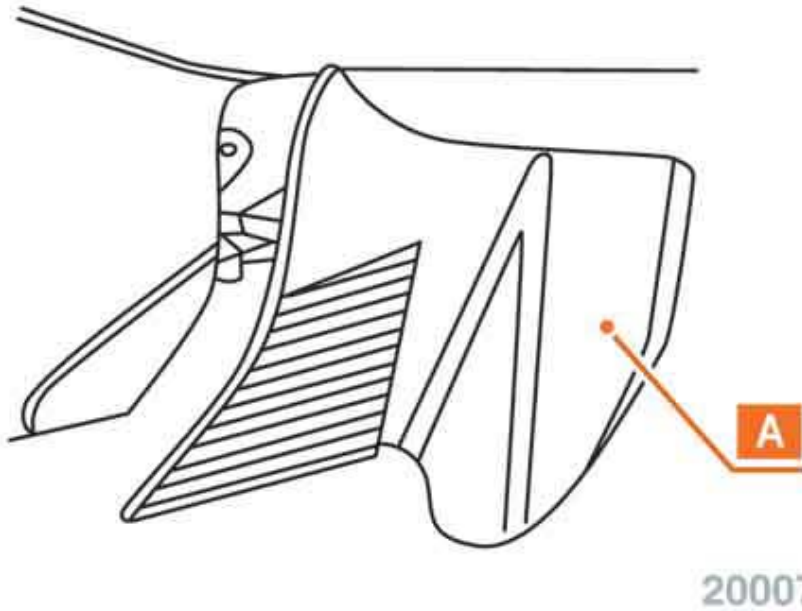

DEMOUNTING THE COMPONENT

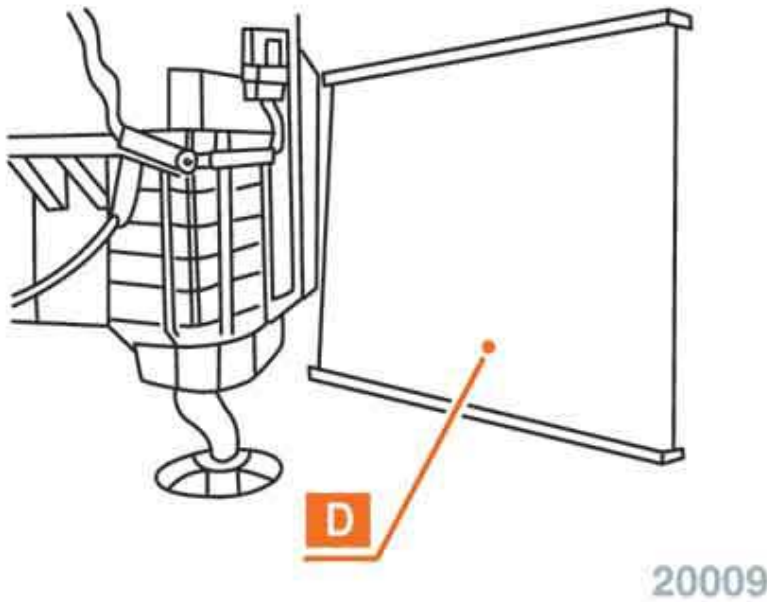

LOCALIZATION

The interior filter is located under the glove box on the driver side.

ACCESSIBILITY

Remove:

- The trim under the dashboard on the passenger side.
- The attachment screws of the filter cover (C).
- The cover (C).

DEMOUNTING THE COMPONENT

Clear the filter (D) by pulling in one's direction.

REASSEMBLY

Proceed reversing the order of the removal.

Use:

- A new filtering element.
- Do not open the filter packaging until the last minute before installing it.